

SCREW PARTS NO.

M3 x 4 pan head screw	N30-3004-46	M3 x 14 pan head screw	N30-3014-46	M4 x 6 pan head screw	N30-4006-46
M3 x 6 pan head screw	N30-3006-46	M3 x 25 pan head screw	N30-3025-46	5φ E washer	N24-3050-60


Fig. No.	Parts No.	Description	Remarks
1	J91-0083-05	Tonearm ass'y	1B
2	J91-0084-05	Tonearm	2B
3	D91-0044-05	Weight ass'y	1B
4	D91-0045-05	Bias weight	1B
5	J91-0483-05	Bias rod	1B
6	D39-0047-05	Tonearm support ass'y	2B
7	N73-2604-41	Screw	2B
8	D21-0407-05	Elevation shaft ass'y	2B
9	D21-0408-05	Elevation shaft	2B
10	G01-0333-05	Compression spring	2B
11	N19-0273-05	Flat head washer	2B
12	N19-0269-05	Flat head washer	2B
13	N14-0112-05	Adjusting nut	2B
14	—	—	—
15	J92-0021-05	Shell ass'y	2B
16	Destinations' list	Cartridge	2B
17	Destinations' list	Cartridge mounting screw	2B
18	N19-0267-05	Nylon washer	1B
19	N09-0271-04	Bolt	1B
20	A53-0021-02	Turntable cover	1B
21	J50-0087-05	Hinge (A)	1B
22	N33-4008-45	Round head flat screw	1B
23	A40-0150-02	Bottom board	3A
24	J02-0079-04	Leg	3A
25	N09-0264-04	Special screw	3A
26	N09-0171-04	Tap tight screw	3A,3B
27	A03-0202-01	Turntable case ass'y	3B
28	J50-0080-05	Hinge (B)	3B
29	N61-3113-45	Round head wood screw	3B
30	D12-0078-04	Operating lever ass'y	2A,2B
31	G02-0070-04	Plate spring	2A,2B
32	Destination's list	Dress panel (A)	2B
33	B03-0114-04	Dress panel (B)	2A
34	D39-0049-04	Tonearm rest	2B
35	J21-1486-04	L shaped hardware	2A,2B
36	N87-3006-45	Tap tight screw	1A,1B
37	D10-0223-04	Speed selector lever ass'y	2A
38	D10-0225-04	Speed selector guide	2A
39	N87-3006-45	Tap tight screw	3A
40	D10-0226-04	Elevation bar ass'y	2B
41	D23-0140-04	Turntable bearing ass'y	2A
42	N14-0048-14	Nut	2A
43	N19-0142-04	Flat head washer	2A
44	T41-0103-05	Motor	2A
45	G13-0105-04	Rubber cushion	2A
46	N19-0186-14	Flat head washer	2A
47	Destinations' list	Motor pulley	1A
48	G01-0351-04	Conical spring (A)	2A
49	G01-0336-04	Conical spring (B)	2A,2B
50	G11-0050-04	Cushion	2A,2B
51	Destinations' list	Power cord	3B
52	Destinations' list	Cord stopper	3A
53	Destinations' list	Cord bushing	3B
54	J41-0017-05	Cord bushing	3B
55	E30-0419-15	Audio cable	3B
56	J19-0492-04	Cable stopper	3B
57	D02-0017-05	Turntable platter	1B
58	G16-0054-13	Turntable sheet	1B
59	D16-0057-03	Drive belt	1A
60	N15-1040-46	Flat head washer	2A
61	B59-0020-04	Transporting screw caution card	2A
62	W01-0057-04	EP adapter	2A

Fig. No.	Parts No.	Description	Remarks
63	Destinations' list	Micro switch	3B
64	Destinations' list	Insulating screw	2B
65	J19-0306-05	Lead crimper	2A,2B
66	E23-0083-05	Terminal lug	2A
67	G01-0336-04	Nylon crimper	2A
68	—	—	—
69	D39-0041-05	PC board stud	2A
70	E22-0416-05	Lug type terminal strips	2B
71	N87-3006-45	Tap tight screw	3B
72	Destinations' list	Power supply unit	2A
73	Destinations' list	Turntable case badge	3A
74	J61-0054-05	Vinyl tie	3B
75	J69-0019-04	Tape	1A
76	Destinations' list	Slide switch	2A
77	Destinations' list	Switch stopper	2A

POWER SUPPLY (X27-1070-01, 02-, -04)

Ref. No.	Parts No.	Description	Remarks
CAPACITOR			
C1	C90-0305-15	Metal film 0.1μF 125WV (X27-1070-01)	
C1	CK45E3D103-PMU	Ceramic 0.01μF 2000WV (X27-1070-02)	
C1.2	CK45E3D103-PMU	Ceramic 0.01μF 2000WV (X27-1070-04)	
RESISTOR			
R1	RC05GF2H120K	Carbon 12Ω ±10% 1/2W (X27-1070-01, -02)	
R1.2	RC05GF2H120K	Carbon 12Ω ±10% 1/2W (X27-1070-04)	
MISCELLANEOUS			
—	F09-0033-05	Capacitor cap (X27-1070-02)	

Fig. No.	U.S.A. (K)	Canada (P)	PX (U)	Australia (X)	Europe (W)	Scandinavia (L)	England (T)	South Africa (S)	Other area (M)	Description
—	A20-1029-01	A20-1029-01	A20-1067-01	A20-1029-01	A20-1067-01	A20-1029-01	A20-1029-01	A20-1029-01	A20-1067-01	Panel
—	B23-0004-04	B23-0004-04	B23-0004-04	B23-0004-04	B23-0004-04	B23-0004-04	B23-0004-04	B23-0004-04	B23-0004-04	Overhang gauge
—	B40-1337-03	B40-1337-03	B40-1382-03	B40-1384-03	B40-1383-03	B40-1381-03	B40-1380-03	B40-1384-03	B40-1382-03	Model name plate
32	B03-0113-04	B03-0113-04	B03-0113-04	B03-0113-04	B03-0113-04	B03-0113-04	B03-0119-04	B03-0113-04	B03-0113-04	Dress panel (A)
73	B43-0161-04	B43-0161-04	B43-0161-04	B43-0161-04	B43-0161-04	B43-0161-04	B43-0160-04	B43-0161-04	B43-0161-04	Turntable case badge
—	B42-0560-04	B42-0560-04	—	—	—	—	—	—	—	Caution sticker
—	B42-0612-04	—	—	—	—	—	—	—	—	Quality indication sticker
—	B50-1476-00	B50-1476-00	B50-1476-00	B50-1476-00	B50-1476-00	B50-1476-00	B50-1530-00	B50-1476-00	B50-1476-00	Instruction Manual
—	B46-0056-00	B46-1055-10	B46-0050-00	—	—	—	—	—	—	Warranty card
—	—	—	B46-0051-00	—	—	—	—	—	—	Power voltage selector caution card
—	—	—	B58-0144-00	—	—	—	—	—	—	Power supply caution card
—	—	—	B58-0139-00	—	—	—	—	—	—	KENWOOD service stations' list
—	—	—	B59-0018-00	—	—	—	—	—	—	Power cord caution card
—	—	—	—	—	—	—	B58-0214-04	—	—	Carton case caution card
—	B58-0043-00	B58-0043-00	—	—	—	—	—	—	—	—
77	—	—	D32-0080-04	—	D32-0080-04	—	—	—	D32-0080-04	Switch stopper (power voltage)
47	—	—	D15-0162-04	D15-0162-04	D15-0162-04	D15-0162-04	D15-0162-04	D15-0162-04	D15-0162-04	Motor pulley (50Hz)
47	D15-0163-04	D15-0163-04	D15-0163-04	—	D15-0163-04	—	—	—	D15-0163-04	Motor pulley (60Hz)
51	E30-0181-05	E30-0181-05	E30-0545-05	E30-0185-05	E30-0459-05	E30-0292-05	040-0304-05	040-0304-05	E30-0545-05	Power cord
—	H01-1580-04	H01-1580-04	H01-1580-04	H01-1580-04	H01-1580-04	H01-1580-04	H01-1581-04	H01-1580-04	H01-1580-04	Carton case
—	H10-1458-03	H10-1458-03	H10-1458-03	H10-1458-03	H10-1458-03	H10-1458-03	H10-1458-03	H10-1458-03	H10-1458-03	Polystyrene foamed fixture
—	H12-0030-04	H12-0030-04	H12-0030-04	H12-0030-04	H12-0030-04	H12-0030-04	H12-0030-04	H12-0030-04	H12-0030-04	Buffer fixture (A)
—	H12-0031-03	H12-0031-03	H12-0031-03	H12-0031-03	H12-0031-03	H12-0031-03	H12-0031-03	H12-0031-03	H12-0031-03	Buffer fixture (B)
—	H12-0032-04	H12-0032-04	H12-0032-04	H12-0032-04	H12-0032-04	H12-0032-04	H12-0032-04	H12-0032-04	H12-0032-04	Buffer fixture (C)
—	H12-0033-04	H12-0033-04	H12-0033-04	H12-0033-04	H12-0033-04	H12-0033-04	H12-0033-04	H12-0033-04	H12-0033-04	Carton board
—	H20-0382-04	H20-0382-04	H20-0382-04	H20-0382-04	H20-0382-04	H20-0382-04	H20-0382-04	H20-0382-04	H20-0382-04	Polyethylene cover
—	H25-0016-00	H25-0016-00	H25-0016-00	H25-0016-00	H25-0016-00	H25-0016-00	H25-0016-00	H25-0016-00	H25-0016-00	Polyethylene bag x 2 (shell, weight)
—	H25-0029-04	H25-0029-04	H25-0029-04	H25-0029-04	H25-0029-04	H25-0029-04	H25-0029-04	H25-0029-04	H25-0029-04	Polyethylene bag (oilier and adapter)
—	H25-0078-00	H25-0078-00	H25-0078-00	H25-0078-00	H25-0078-00	H25-0078-00	H25-0078-00	H25-0078-00	H25-0078-00	Polyethylene bag (oilier and adapter)
—	H39-0015-05	H39-0015-05	H39-0015-05	H39-0015-05	H39-0015-05	H39-0015-05	H39-0015-05	H39-0015-05	H39-0015-05	Curl stopper
52	J19-0484-04	J19-0484-04	J19-0492-04	J19-0492-04	J19-0492-04	J19-0492-04	J19-0492-04	J19-0492-04	J19-0484-04	Cord stopper
53	J41-0034-05	J41-0034-05	J41-0024-05	J41-0024-05	J41-0017-05	J41-0017-05	J41-0024-05	J41-0024-05	J41-0034-05	Cord bushing
—	—	—	—	—	J61-0014-05	J61-0014-05	J61-0014-05	J61-0014-05	—	Free-up belt
17	N09-0250-05	—	—	—	—	—	—	—	—	Cartridge mounting screw x 2
17	N09-0251-05	—	N09-0265-05	N09-0265-05	N09-0265-05	N09-0265-05	N09-0265-05	N09-0265-05	N09-0265-05	Cartridge mounting screw x 2
64	N09-0195-04	N09-0195-04	N09-0195-04	N09-0195-04	N09-0195-05	N09-0195-05	N09-0275-04	N09-0195-04	N09-0195-04	Insulating screw
63	S50-1017-05	S50-1017-05	S50-1017-05	S50-1017-05	S50-1017-05	S50-1017-05	S50-1017-05	S50-1017-05	S50-1017-05	Micro switch
76	—	—	S31-2001-05	—	S31-2001-05	—	—	—	S31-2001-05	Slide switch (power voltage selector)
16	—	—	T21-0053-05	T21-0051-05	T21-0051-05	T21-0051-05	T21-0051-05	T21-0051-05	T21-0051-05	Cartridge
—	—	—	—	—	—	—	—	—	—	Small screw driver
—	X27-1070-01	X27-1070-02	X27-1070-02	X27-1070-02	X27-1070-02	X27-1070-02	X27-1070-04	X27-1070-02	X27-1070-02	Power supply unit

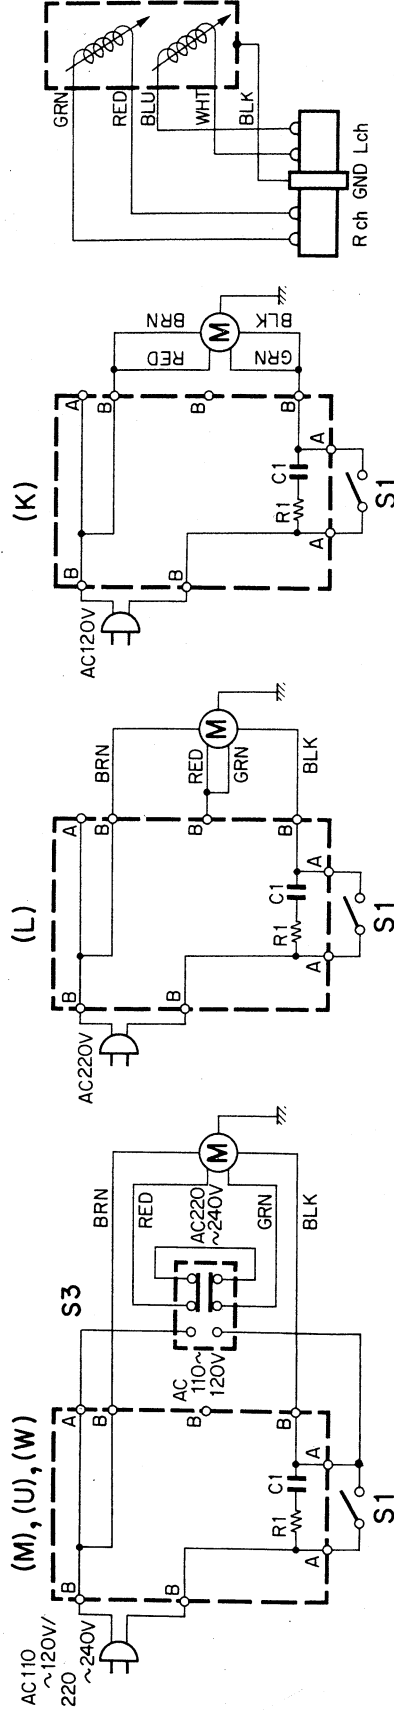

POWER SUPPLY UNIT	R1,2	C1,2	POWER SUPPLY UNIT
USA (K)	12Ω 1/2W	0.1μF 125WV	X27-1070-01
OTHER AREAS (M)	—	0.01μF 2000WV	X27-1070-02
PX (U)	—	—	—
EUROPE (W)	—	—	—
ENGLAND (T)	—	—	—
SOUTH AFRICA (S)	—	—	X27-1070-04
SCANDINAVIA (L)	—	—	X27-1070-02

M : MOTOR
S1,2 : MICRO SW.
S3 : SLIDE SW.

